

Breeze

by

ACCESS™



Breeze Backrest installation



Backrest assembly kit


- Backrest bow
- 2x bow clamps
- 4x screws

Tool needed

- Screwdriver (PH2)



The backrest bow is marked with Left and Right, referring to walking direction.

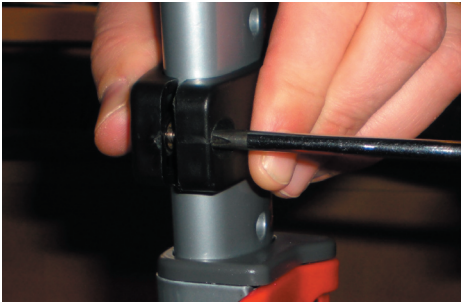

Place the backrest bow at desired height, place the clamps and use the screws to fasten.



Before use, check that the backrest is fixed firmly.

Breeze Backrest installation